

## Advantech AE Technical Share Document

<b>Date</b>	2021/9/10	<b>SR#</b>	1-4662619471
<b>Category</b>	<input checked="" type="checkbox"/> FAQ <input type="checkbox"/> SOP	<b>Related OS</b>	N/A
<b>Abstract</b>	How to launch Mosquitto broker on ECU-1051?		
<b>Keyword</b>	Mosquitto		
<b>Related Product</b>	ADAM-3600, ECU-1152, ECU-1251, ECU-1051		

### ■ **Problem Description:**

This document explains how to launch Mosquitto broker on ECU-1051.

Please note that only the image **with EdgeLink** content this process.

This document contents 3 parts:

1. The method of launching Mosquitto broker.
2. The method of modify the listening port number.
3. The method of modify the MQTT username/password.

More detail of the Mosquitto application please refer to the Mosquitto official website.

<https://mosquitto.org/>

### ■ **Answer:**

Part 1. The method of launching Mosquitto broker.

Step 1. Go to the folder “/home/sysuser/util” and launch Mosquitto broker with the following command.

```
# mosquitto -v
```

```
root@ecul051:/home/sysuser/util# mosquitto -v
1631253727: mosquitto version 1.6.3 starting
1631253727: Using default config.
1631253727: Opening ipv4 listen socket on port 1883.
1631253727: Opening ipv6 listen socket on port 1883.
```

Part 2. The method of modify the listening port number.

Step 1. Download “” file from the Mosquitto official website and do the following modifications marked in yellow.

```

192 # When run as root, drop privileges to this user and its primary
193 # group.
194 # Set to root to stay as root, but this is not recommended.
195 # If run as a non-root user, this setting has no effect.
196 # Note that on Windows this has no effect and so mosquito should
197 # be started by the user you wish it to run as.
198 #user mosquito
199 user nobody

```

The following example is let the broker listening on port 8883.

```

201 # =====
202 # Default listener
203 # =====
204
205 # IP address/hostname to bind the default listener to. If not
206 # given, the default listener will not be bound to a specific
207 # address and so will be accessible to all network interfaces.
208 # bind_address ip-address/host name
209 #bind_address
210
211 # Port to use for the default listener.
212 #port 1883
213 port 8883

```

Step 2. Put this file under the folder of the ECU-1051 and modify the privilege.

Folder path: /home/sysuser/project

# chmod +x /home/sysuser/project/mosquitto.conf

```

root@ecu1051:/home/sysuser/project/mosquitto.conf: Permission denied
root@ecu1051:/home/sysuser/util# chmod +x /home/sysuser/project/mosquitto.conf
root@ecu1051:/home/sysuser/util# ll
total 676
-rwxr-xr-x  1 sysuser  sysuser    31024 May 31 20:17 AdvFirmupdate
-rwxr-xr-x  1 sysuser  sysuser    7792  May 31 20:17 DataLoggerSDKTest

```

Step 3. Run the following command to launch the Mosquitto broker.

# mosquitto -c /home/sysuser/project/mosquitto.conf -v

```

10.0.0.1 - PuTTY
1631253128: mosquitto version 1.6.3 starting
1631253128: Config loaded from /home/sysuser/project/mosquitto.conf.
1631253128: Opening ipv4 listen socket on port 8883.
1631253128: Opening ipv6 listen socket on port 8883.
1631253128: Warning: Mosquitto should not be run as root/administrator.
^C1631253227: mosquitto version 1.6.3 terminating

root@ecu1051:/home/sysuser/util# mosquitto -c /home/sysuser/project/mosquitto.conf -v
1631253229: mosquitto version 1.6.3 starting
1631253229: Config loaded from /home/sysuser/project/mosquitto.conf.
1631253229: Opening ipv4 listen socket on port 8883.
1631253229: Opening ipv6 listen socket on port 8883.
1631253241: New connection from 10.0.0.101 on port 8883.
1631253241: New client connected from 10.0.0.101 as paho-19457989705300 (p2, c1, k60).
1631253241: No will message specified.
1631253241: Sending CONNACK to paho-19457989705300 (0, 0)
1631253244: Received PUBLISH from paho-19457989705300 (d0, q0, r0, m0, 'test', ... (3 bytes))

```

Part 3. The method of modify the MQTT username/password.

Please refer to the Mosquitto official website: [https://mosquitto.org/man/mosquitto\\_passwd-1.html](https://mosquitto.org/man/mosquitto_passwd-1.html)

The required tool (mosquitto\_passwd.exe) is under the following folder of ECU-1051.

```
# cd /home/sysuser/util/
```

```
root@ecu1051:~# cd /home/sysuser/util/
root@ecu1051:/home/sysuser/util# ls
AdvFirmupdate          diotest                nethogs
DataLoggerSDKTest     fixroute              netset
Iologger_read         gpiotest             nodeidtest
adb2db3               gpssdk_demo          remountfs
advwtest              ipcheck              smstest
batterytest           ledtest              udisk_backup.sh
dc_tag_monitor        mailtest             udisk_run.sh
dc_tag_owner          modemscan            updatetz.sh
dc_tag_read           mosquitto_passwd     watchburn
dc_tag_read_subscription mosquitto_pub        watchtest
dc_tag_update         mosquitto_rr         wdttest
dc_tag_write          mosquitto_sub
root@ecu1051:/home/sysuser/util#
```